



FlashCove™ Prefabricated Bases Inc

Installation Procedures

Maintain ambient air temperature at flooring installation area above 20 degrees C (68 degrees F) for a minimum of 72 hours prior to the installation, during the installation, and for a minimum of 72 hours after the installation. Temporary heat is NOT acceptable.

FlashCove™ Prefabricated Base to be acclimatized as per flooring manufacturer's recommendations

Floors and walls must be level to meet the ASTM F710-08 Standard Practice for Preparing Concrete Floors to Receive Resilient Flooring; surfaces shall be level to within 3/16" (3.9mm) in 10 lineal feet; and free from dust, oil, grease, and debris.

Walls must be square to floor level

Moisture test results should meet the flooring manufacturer's recommendations.

Dry-fit FlashCove™ Prefabricated Base; cut and fit material to required lengths, use a carpenter's bevel to establish accurate angles for the inside and outside corners, mitre cut, using a power mitre saw, inside and outside corners.

Dry-fit and cut stainless steel "Chiklet" cove cap prior to FlashCove™ Prefabricated Base installation.

Position dry-fitted FlashCove™ Prefabricated Base against wall; using a pencil draw a line at the top of the base and the edge of the toe to establish a glue line.

Apply cove base adhesive in full spread (100% coverage on two surfaces), for full length of the FlashCove™ Prefabricated Base material. Apply cove base adhesive to floor and wall area within the established glue line area, as well as the back of the base. Ensure that the cove base adhesive manufacturer's recommended spreader and set up times are followed.

Apply FlashCove™ base to wall surface straight and level.

Slide stainless steel "Chiklet" cove cap behind the base, ensuring proper transfer of adhesive.

Using a hand roller, roll the FlashCove™ Prefabricated Base material onto wall and floor surfaces, ensure maximum adhesive adhesion is obtained, and remove bumps, ripples and fishmouths.

Remove all excess adhesive.

You are now ready to install field material and scribe to FlashCove™ as per flooring manufacturer's recommendations.

Inside and outside corners, as well as all seams in FlashCove™ Prefabricated Base and field material to be seam treated (heat weld or seam seal) as per flooring manufacturer's recommendation.

For technical assistance please contact FlashCove™ at (905) 475-0915 or 1-800-334-5147, or go to our Website at www.FlashCove.com